



### **INIT Required**

This means the Pinpad needs to be Intialised to the Bank in order for it to process transactions.

### **INITIALISING TO THE BANK**

To Intialise to the Bank you can:

- Go through the PC-EFTPOS Client (The C located on the right-hand side of the Taskbar), then via the Control Panel and EFTPOS tab. There will be an option of Logon, if you select this option it will go through a process of initialising to the Bank.
- Or you can simply attempt a transaction, which will automatically log the Pinpad on to the Bank.