


## Argent Leased Line H/W Setup

---

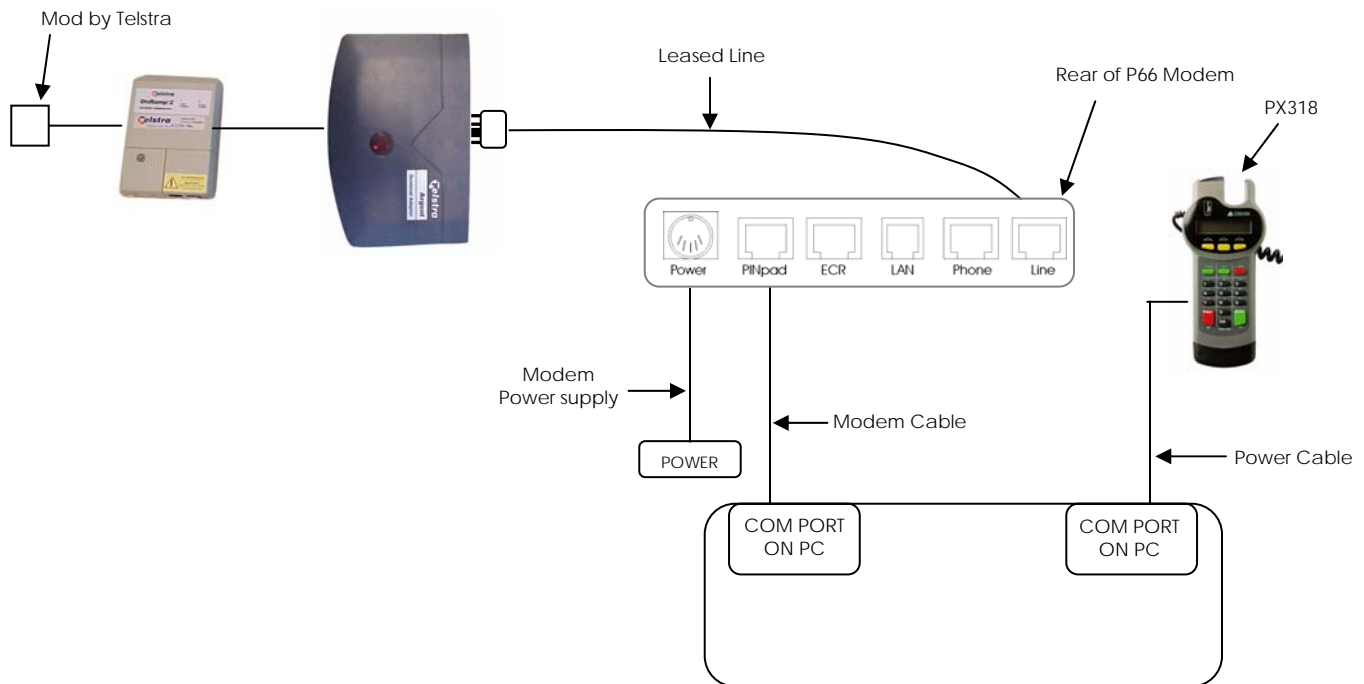

### INSTALLATION

1. The On Ramp is to be installed by Telstra
2. The Telstra Argent Adaptor is to be installed by Telstra

### PX318

3. Plug the PX318 PINpad into the PX318 power cable
4. Plug the PX318 power adaptor into one of the COM ports on the PC

### P66 Modem

5. Plug the modem power supply into the P66 socket marked "Power"
6. Plug the leased line phone cable into the P66 socket marked "Line", and into the Telstra Argent Adaptor
7. Plug the modem cable into the PC COM port and then into the P66 socket marked "Pinpad".